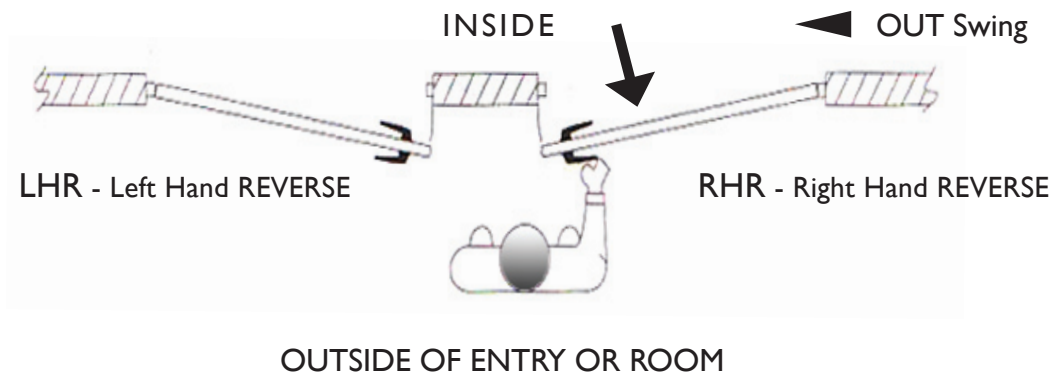
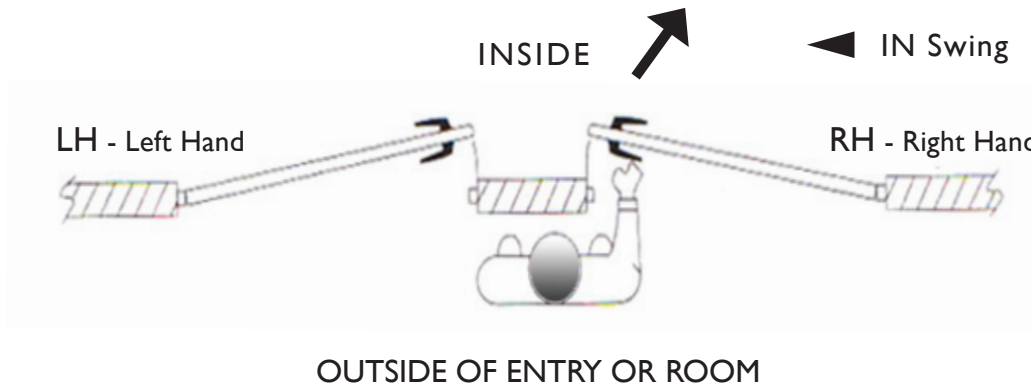

DOOR HANDING CHART



THE HANDING OF THE DOOR IS ALWAYS DETERMINED FROM THE OUTSIDE

HERE ARE A FEW RULES TO FOLLOW

- The outside of the exterior door is the street or entrance side
- The outside of a room door is the hall side
- The outside of a closet door is the room or hall side

FOLGER & BURT

Architectural Hardware, Inc.

4635 WEST WALNUT ST. SOQUEL CA 95703 831 464 3295
1580 SIXTEENTH ST. SAN FRANCISCO CA 94133 415 255 2800